


zmodo™

**QUICK
START** **GUIDE**
SMART DOORBELL

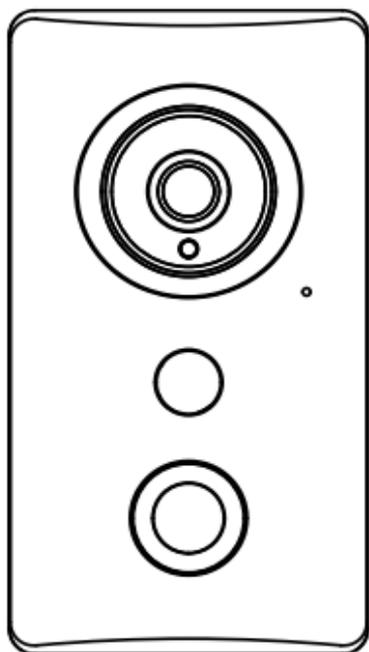

Congratulations! We are excited to welcome you to the next generation of smart technology. We believe that our products can bring you the best in convenience and security.

Follow the steps below to install and set up the doorbell:

1 Before you begin

You will need a strong WiFi connection near your doorbell.

Make sure that your package includes the smart doorbell, 6 screws and 6 anchors.


Make sure that your wiring is connected to a mechanical doorbell chime and a transformer with a low-voltage of 10VAC-36VAC.

DO NOT directly attach the doorbell to primary power (110/120 VAC and 220/230/240 VAC).


If you do not use a doorbell chime, you **MUST** use a 20 ohm/10 watt resistor between the smart doorbell and one wire from the power source. Resistor not included in packaging. Failing to do so will cause damage to the smart doorbell and void the warranty.

2 Mounting your doorbell

- 1 Remove your existing doorbell button.** Once you've removed your old doorbell, make sure that the two wires used to connect your doorbell button remain exposed.
- 2 Remove the mounting bracket from your Smart Doorbell.** Loosen the two screws on the bottom of the doorbell and slide down to remove the mounting bracket.

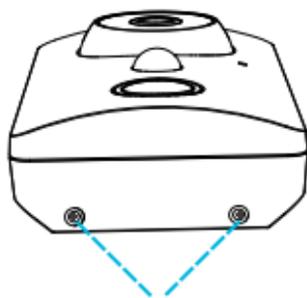

Loosen these two screws

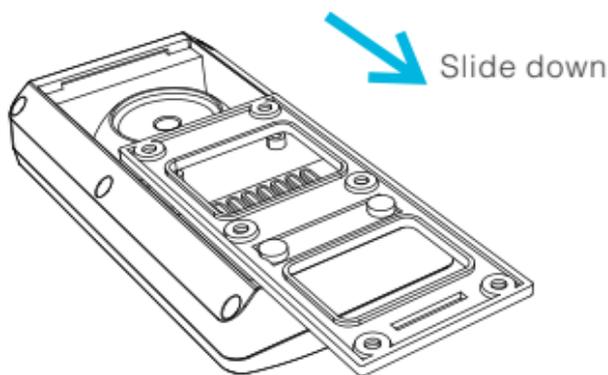


- 3** **Mark and drill the appropriate holes in the wall for the mounting bracket.** Line the bracket against the wall where you would like to install the doorbell. Using the bracket as a guide, mark the wall with the six corresponding holes for the screws.

Remove the mounting bracket, and drill six holes slightly smaller than the wall anchors.

Hint: Try using a level to make sure that the mounting bracket is properly aligned.


- 4** Fasten the mounting bracket onto the wall, and connect the wires to the wire terminals. Feed the two wires from Step 1 through either one of the large openings in the mounting bracket.

Using the appropriate wall anchors and screws, fasten the mounting bracket onto the wall. Then, fasten the two wires to the terminals on the bracket by tightening the screws (you can fasten the wires to either terminal).

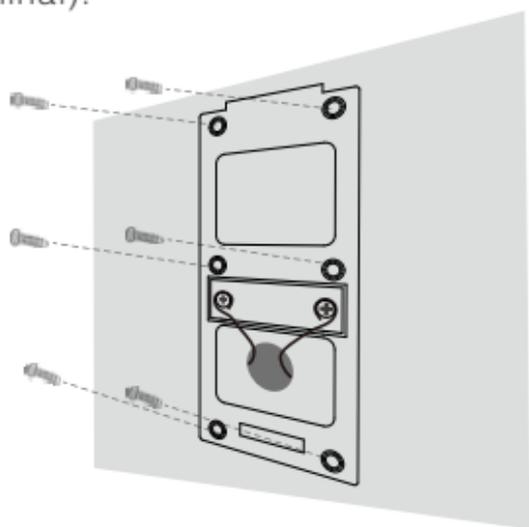

Note: When mounting on brick, concrete or stucco, use the provided screws with anchors. When mounting on wood or vinyl, drill the surface.

- 5** Attach the doorbell to the mounting bracket and adjust the camera as needed. Slide the doorbell onto the mounting bracket, and tighten the two screws on the bottom of the doorbell until secure. Adjust the camera until you have a clear view of your front porch.

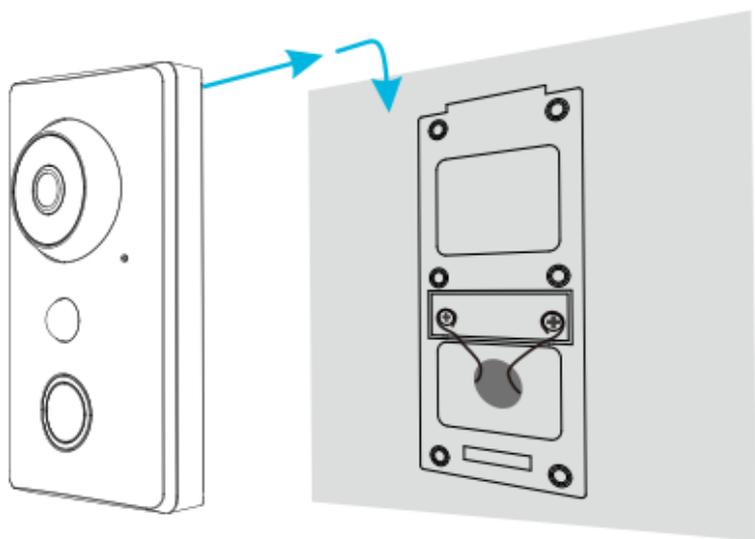

3

Configuring your doorbell

Follow the steps below to connect your doorbell to the Internet and set up an account.

System Requirements: iPhone®, iPad®, iPod touch® (v.7.0 or newer) or Android™ (v.4.0 or newer), password-protected 2.4GHz WiFi network.

- 1 Download and install the 'MeShare' app from Google Play™ or the App Store™. Launch the app and sign up for a free MeShare account.



or



MeShare

- 2 Log in and press the + Add Device option located on the bottom of the screen. Follow the on-screen instructions to complete your setup!

Viewing and recording options

MeShare Web App

In addition to the mobile app, you can also view live video and recordings from your computer. Just log in to the free web app at user.meshare.com with your MeShare username and password.

MeShare Cloud Service (MCS)

The MeShare Cloud is an optional service that lets you make the most of your smart devices. Some things you can do:

- Record continuously and store the footage on our secure cloud servers.
- Create and save video clips from your recordings.
- Access your playback footage and clips from any location with Internet connection.
- Share recorded footage and clips with family and friends.

Visit www.meshare.com/cloud for more information on plans and features.

Status Indicator

 **Solid green**

The doorbell is powering on.



Blinking green

The doorbell is ready for Smartlink setup.

 **Solid blue**

The doorbell has successfully connected to the WiFi network.



Blinking blue

The doorbell is connecting to the WiFi network. Please do NOT turn off or unplug the device.

 **Solid red**

The doorbell can't connect to the WiFi. Why? You may have entered the password incorrectly. Try re-entering your WiFi password.

OR

You may not have a working internet connection. Check to see if your router is connected to the Internet. Try resetting your doorbell by pressing the reset pinhole on the bottom of the device, and begin the setup procedure again.

 **Having difficulty?**

For more instructions, troubleshooting, support information, our knowledge base, the community forum, and other resources, please visit: <http://www.zmodo.com/supports>

Connect with us!



Like us on Facebook.com/Zmodo OR
Scan the QR-code below



Follow us on Twitter @Zmodo OR
Scan the QR-code below



Android is a trademark of Google Inc. Google Play is a trademark of Google Inc. Apple, the Apple Logo, and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.